

## CRL Standoff Slot Mounting Options



Set Fastener into Surface



Thread Onto Fastener



or Install on Standoff Base

