


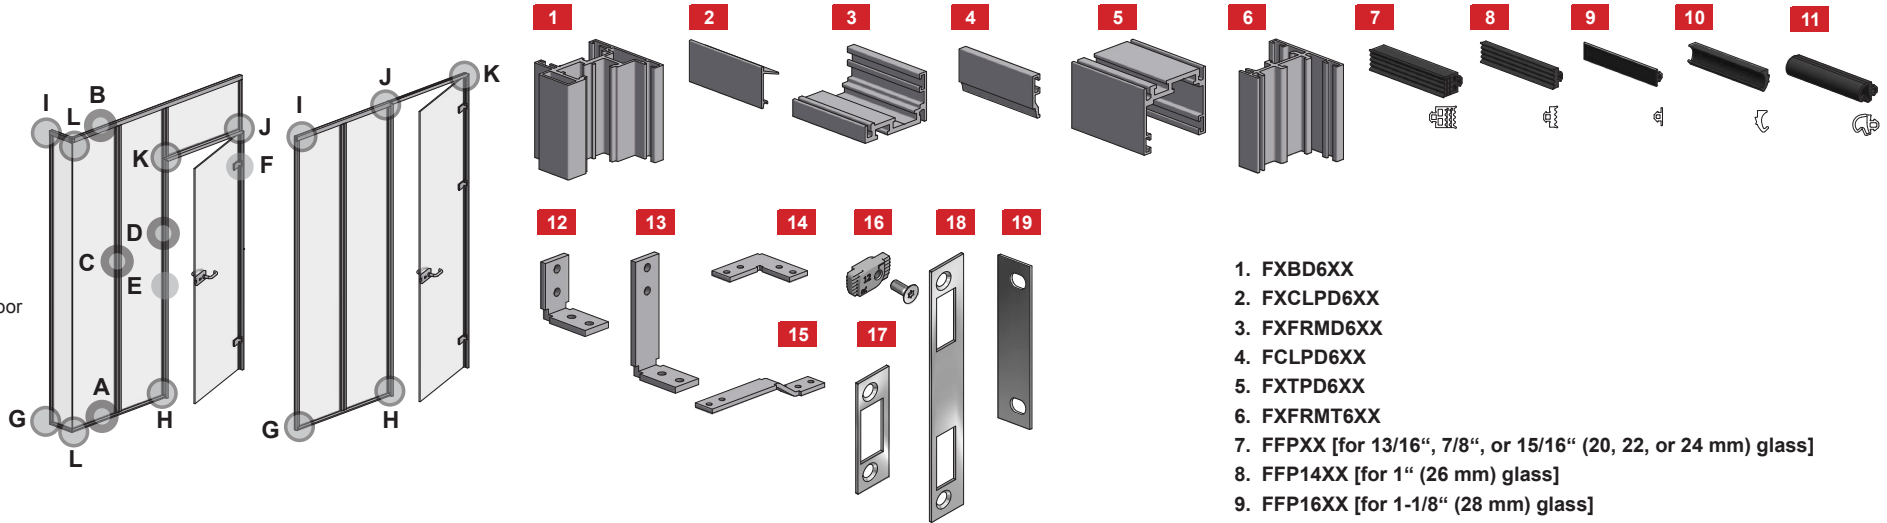
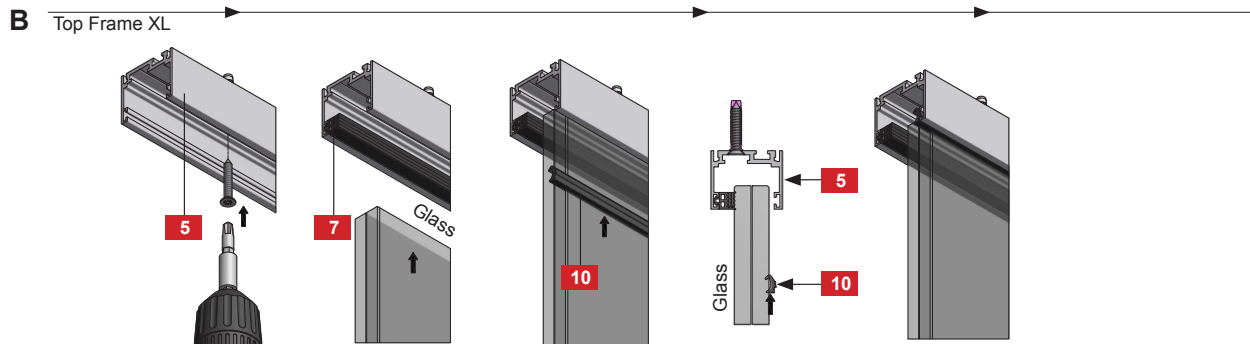
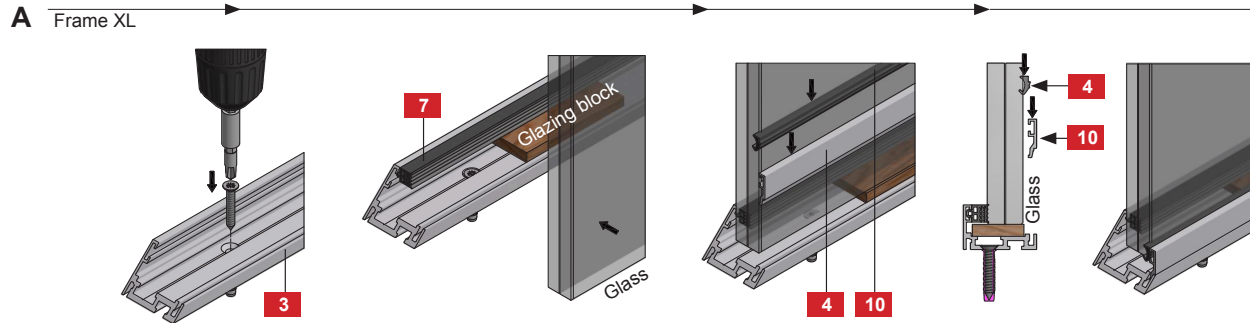


FALLBROOK XL Assembly instructions **PAGE 1**

-  A-D Profiles
-  G-K Profile connections
-  E-F Fastening
Strike plate/Door hinge



1. FXBD6XX
2. FXCLPD6XX
3. FXFRMD6XX
4. FCLPD6XX
5. FXTPD6XX
6. FXFRMT6XX
7. FFPXX [for 13/16", 7/8", or 15/16" (20, 22, or 24 mm) glass]
8. FFP14XX [for 1" (26 mm) glass]
9. FFP16XX [for 1-1/8" (28 mm) glass]
10. FRGXX
11. FXDJXX
12. FFCC
13. FFCL
14. FXCH
15. FXCZ
16. FXHHN
17. FXSP



For powder coated surfaces it is recommended to use soapy water for inserting the fixation rubber.




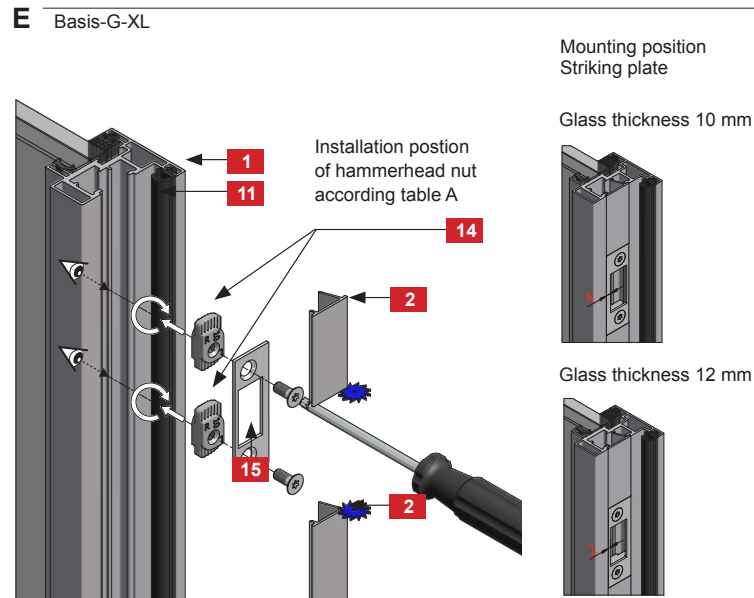




Table A	Strike plate		Door hinge	
Glass thickness	10	12	10	12
DIN Left	H4	H3	H1	H3
DIN Right	H3	H4	H2	H4

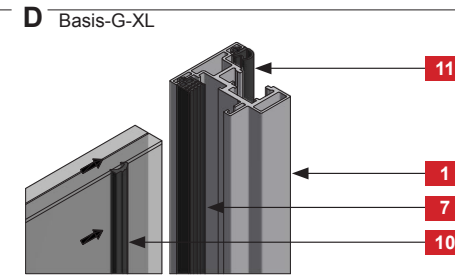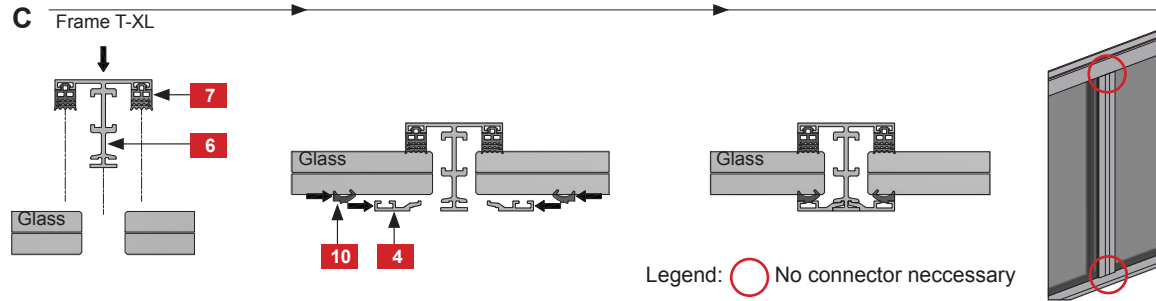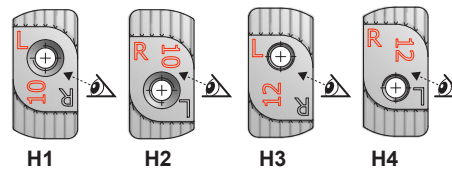

Legend:

 Line of sight as shown below

 Field measure after installation of hinges and strike

