


WARNING:


When using this hinge, an 11/16" (17mm) clearance (gap) is required on the hinge side of the door. You must add your desired strike side clearance (gap) for an overall width deduction.

PETITE

Wall Mount Hinge – Standard Back Plate Cat. No. PET045

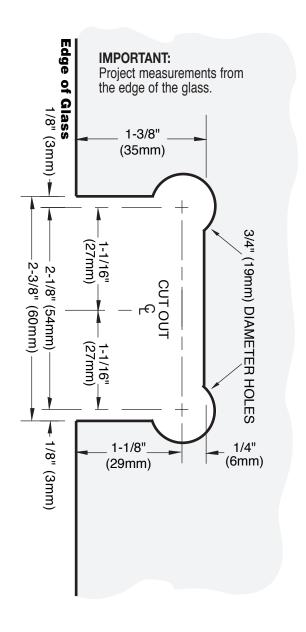



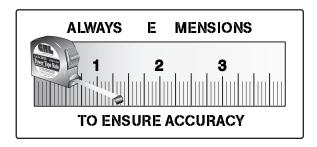

WARNING:

When using this hinge, an 11/16" (17mm) clearance (gap) is required on the hinge side of the door. You must add your desired strike side clearance (gap) for an overall width deduction.

PETITE

Wall Mount Hinge – Standard Back Plate CAT. No. PET054

