C.R. LAURENCE CO., INC. PROFESSIONAL QUALITY * SEE TEMPLATE ON BACK * 2" Refer to Dimensions Shown (50mm) to Ensure Accuracy 3-9/16" (90mm) 3-9/16" (90mm) 7/16" 2-7/16" (11mm)(62mm)

MELBOURNE Wall Mount Hinge – Full Back Plate CAT. No. MEL037

*Maximum	5/16" (8m		3/8" (10mm) Glass		1/2" (12mm) Glass	
Door Capacities	Weight	Width	Weight	Width	Weight	Width
Using 2 Hinges						
Using 3 Hinges	120 lbs.(54 kg)	34"(864mm)	120 lbs.(54 kg)	34"(864mm)	120 lbs.(54 kg)	34"(864mm)

***NOTE:** Do not exceed either maximum weight or width when choosing proper quantity of hinges.

Important Information:

This hinge contains a dual degree pivot pin. The pivot pin is set for normal door closing position. You have the option of altering the closing position of the door 5 degrees inward by utilizing the opposite side of the pivot pin, which has been pre-machined (see Section 3 of Cat. No. SDT21 Frameless Shower Door Guide for this procedure). Special order custom pivot pins are available (Cat. No. GENP1N) that can be machined at any angle up to 45 degrees.

Specifications:

Glass Sizes: 5/16" (8mm) to 1/2" (12mm) thick tempered safety glass Construction: Solid brass Closing Type: Self-centering when within 15° of closed position Cutout Required Includes: Gaskets, screws and template

Use of Gaskets:

For 5/16" (8mm) Glass: Use two thick gaskets stamped with 8mm For 3/8" (10mm) Glass: Use two gaskets stamped with 12-10mm For 1/2" (12mm) Glass: Use two gaskets stamped with 12-10mm

Recommendations:

For public safety, we recommend the use of only tempered safety glass. Do not use power tools when installing these hinges.


Maintenance Guidelines:


- Our hinges are greased at the factory for quiet and trouble-free operation. If there is any squeaking that occurs after installation, put a drop of "3 in 1 Oil" (also known as "household oil") on the white nylon washer that the hinge body pivots on. This washer is the component that acts as a buffer, so the body of the hinge doesn't pivot directly on the brass center block. This solution doesn't require the disassembly of the hinge.
 Note: Do not use spray lubricant on these hinges. If the hinge has been disassembled, upon re-assembly, use white lithium grease to lubricate the interior mechanism.
- Never use an abrasive cleaner on the hardware. Many of the components are coated with a clear lacquer that will be irreparably damaged if subjected to harsh, abrasive chemicals. Advise your customer that drying the hardware with a clean, soft towel on a daily basis is the best way to maintain the hardware. If mineral deposits build-up, mix a couple of drops of a mild liquid soap (such as lvory or a similar product) into a cup of warm water. Using a soft, non-abrasive cloth, clean the hardware. Rinse thoroughly with clean, warm water and dry.

C.R. Laurence Co., Inc. crlaurence.com For technical assistance in the United States call toll free (800) 421-6144; from Canada call toll free (877) 421-6144; Outside the U.S. and Canada call (323) 588-1281. Ask for Tech Sales at Extension 7740. Toll free fax (800) 458-7496.

4F-27



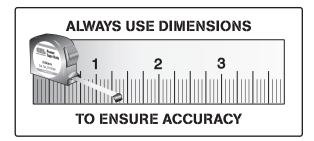

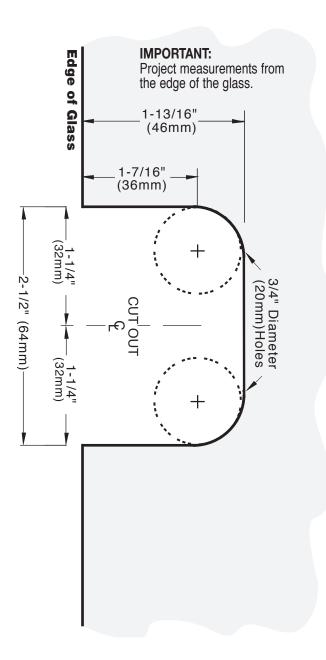

MELBOURNE Wall Mount Hinge – Full Back Plate CAT. No. MEL037

C.R. Laurence Co., Inc. crlaurence.com For technical assistance in the United States call toll free (800) 421-6144; from Canada call toll free (877) 421-6144; Outside the U.S. and Canada call (323) 588-1281. Ask for Tech Sales at Extension 7740. Toll free fax (800) 458-7496.

@ Copyright 2009, C.R. Laurence Co., INC_SDT21_U6 REV.05/18